



## VT9102 Installation Guide


### 1 - Attach Arm Mount



Before beginning, please be certain that the mount is secure on the surface.

Insert the shaft of the arm assembly into the mount

### 2 - Bracket Tilt Assembly

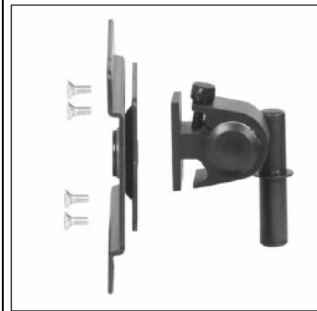

Carefully remove the base from the flat panel monitor.

If the adapter bracket is already attached to the tilt mechanism, skip this step and continue with Step 3. Attach the bracket using the (4) 1/2-20 x 1/2 Philips Pan Head Screws.

### 3 - Attach Tilter/Bracket to LCD




Align the tilter and adapter bracket with the hole pattern on the back of your LCD. Use the (4) four M4-12 Philips Pan Head Screws to attach the plate to the back of the monitor.

**NOTE:** This arm will only work with 75MM and 100MM VESA Standard. If the bracket does not line up with the hole pattern on the monitor, please contact your sales representative.

### 4 - Monitor to Arm Assembly

Slide the tilter shaft into the hole in the end of the forearm.

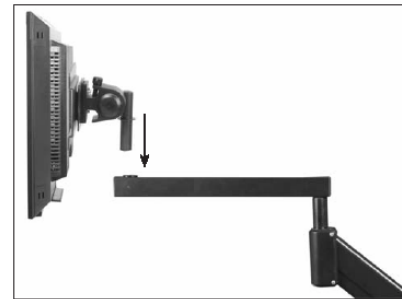

### 5 - Counter-Balance Adjustments

- ⇒ **The monitor MUST be attached before adjusting the counter-balance.**
- ⇒ **It is important to hold the arm in a horizontal position before beginning.**




Use the 1/4" allen wrench and insert into the top of the end cap.

Turn the allen wrench counter clockwise (left) to strengthen and clockwise (right) to weaken the arm.

### 6 - Adjusting Friction Joints

Friction joints are located (1) in the forearm, (2) the forearm's pivot point and (3) the mount base.

Insert the 3/32" allen wrench into the set screw and tighten or loosen to the desired degree of friction. (left to loosen - right to tighten)

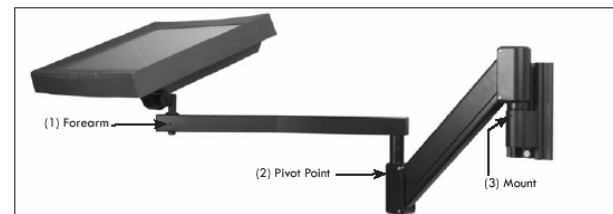

**HEADQUARTERS**  
 11529 Sun Belt Ct.  
 Baton Rouge, Louisiana 70809

**Phone** 800.223.8050  
**International** 001.225.298.0300  
**Fax** 225.297.2440

**E-mail** sales@vartechsystems.com  
**Website** www.vartechsystems.com